



Instruction manual for integrated tumble dryer

Model code: TDI110



Contact Caple on 0844 800 3830 or for spare parts www.4caple.co.uk

CONTENTS

Important User Information

Installation

The Filter

Operating Instructions

Drying your Laundry

Door & Decor Door Reversal

Technical Data & Problem Guide

IMPORTANT USER INFORMATION


These notes are provided in the interest of safety. You must read them carefully before installing or using this appliance.

- Children should not be allowed to tamper with the controls and should be supervised to ensure they do not play with the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance responsible for their safety.
- This tumble dryer is intended for domestic use only.
- The room must be adequately ventilated to avoid back flow of gases into the room from appliances burning gas or any other fuels. This includes open fires.
- Any electrical work required to install the appliance should be carried out by a qualified person.
- This tumble dryer should be serviced by an appointed service organization and only genuine spare parts used.
- It is dangerous to alter or modify the product in any way, other than fitting authorized accessories.
- It is important to clean the lint filter after each drying cycle.
- Under no circumstances should anything other than the recommended articles be placed in the tumble dryer. These can cause fires.
- Do not place articles which have been in contact with dry cleaning fluid, petrol, cooking oil, fat, hair lacquer or other flammable substances in the tumble dryer.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- Do not place articles which have been in contact with dry cleaning fluid or other flammable substances in the tumble dryer.
- Remove all objects from pockets such as lighters and matches.
- Do not attempt to dry dripping wet articles.
- Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
- Do not dry unwashed items in the tumble dryer.
- Do not use the tumble dryer if you suspect that it is damaged in any way. Under no circumstances should you attempt to repair the appliance yourself. Repairs carried out by inexperienced persons may cause serious injury.
- We recommend that the appliance is switched off each time after use. It should be disconnected from the electricity supply if it is to be unattended for long periods, (i.e. weekends or holiday etc).
- **DO NOT use a two-way or multi-way adapter, or extension lead. The dryer must be connected to its own individual socket.**
- The special mains cable and plug assembly must be replaced with a genuine part from the manufacturer or his service agent.
- When installing, position the appliance so that the plug is accessible.
- This appliance must be earthed.
- Exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels.


INSTALLATION

The tumble dryer is fully compatible with any 600mm deep kitchen units and complies with stringent EEC regulations.

Your dryer is provided with a vent hose which will extend to approx 2.4m (8ft). We strongly recommend that this is vented through the wall with the attachment provided. The position of the hole (100mm diameter) for the vent directly behind the tumble dryer is shown in the diagram.

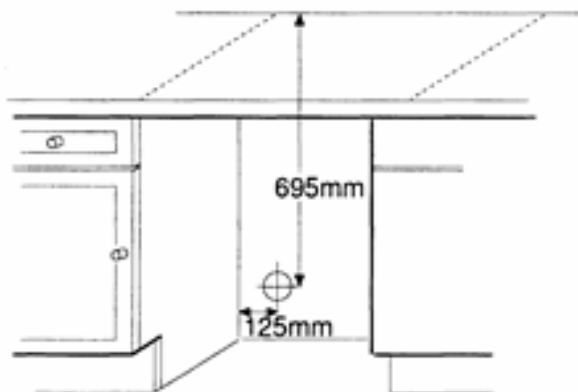

 If the through the wall vent is to be positioned other than behind the dryer, the vent hose should be positioned at floor level and through adjacent side panel to a relevant position. The plinth must be cut-out to accommodate the air vent grill at the bottom front of the tumble dryer.



IMPORTANT

The air vent at the front of the appliance must never be covered or blocked in any way as this will cause the dryer to overheat.

This appliance must not be installed behind a lockable door, a sliding door or a door with hinges on the opposite side to that of the tumble dryer.

The dryer should not be placed directly next to ovens or cookers, as the performance of the dryer may be affected.


ELECTRICAL CONNECTIONS: We strongly recommend that any electrical work is carried out by a qualified person complying with the IEE 17th addition of the electrical regulations.

IMPORTANT

Please remember that the tumble dryer must be capable of being switched off, (disconnected from the supply), when fitted in position

THE FILTER

The filter is found, as seen from the diagram, by opening the door and must always be in position when drying items in the appliance. To allow the dryer to operate efficiently it should be cleaned after each drying cycle. Do not be alarmed by the amount of fluff deposited on the mesh. It is not due to excessive wear caused by the dryer but more an indication of it's efficient operation. All fabric loses fluff when drying but it goes unnoticed into the air. In a tumble dryer it simply collects in the filter.

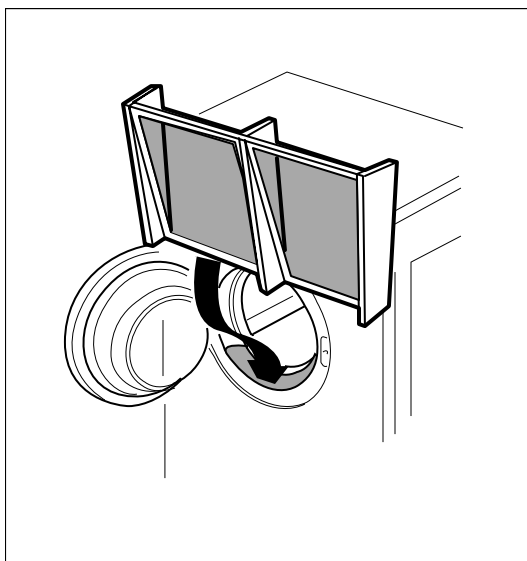

CONTROL PANEL GUIDE



1. PROGRAMME SELECTOR: Choose the final dryness of the load by selecting the desired dryness setting (see the programme chart). The dryer will stop automatically when the chosen dryness is achieved. Note: the use of an iron dry programme will use 30% less energy than a cupboard dry programme.

2. HEAT SETTINGS: High – For fabrics insensitive to higher temperatures, such as cotton.
Low – For temperature sensitive clothes.

3. START BUTTON: Press to start the drying cycle.

4. ANTI-CREASE ACTIVE NEON When lit constantly, the neon indicates that the drying cycle is completed and clothes can be removed. To reduce creasing of clothes, anti-crease will automatically start once the drying cycle is complete.

PROGRAMME DESCRIPTIONS

- | | |
|-------------------|-------------------|
| 1. extra dry | 5. iron dry |
| 2. cupboard dry | 6. damp dry |
| 3. mid dry | 7. timed dry |
| 4. extra iron dry | 8. 30 mins airing |

Program 1 – Extra dry: clothes are dry enough to be put away

Program 2 – Cupboard dry: clothes are dry enough to be put away

Program 3 – Mid dry: depending upon fabric, clothes are generally dry enough to be put away

Program 4 – Extra iron dry: clothes are almost dry but can be easily ironed

Program 5 – Iron dry: clothes are slightly damp and ready to be ironed

Program 6 – Damp dry: clothes are damp and ready to be ironed

Program 7 – 30 minute timed drying program

Program 8 – 30 minute timed 'airing' program; useful for freshening up clothing.

Programs 1-7 can be operated on either full heat or half heat setting and have a 12 minute cool-down period at the end of the cycle

 

 
Program 8 operates without the heater (regardless of the heat switch setting), circulating air through the dryer at the ambient temperature.

PLEASE NOTE: THE DRYER WILL CONTINUE TO RUN IN ANTI-CREASE MODE UNTIL THE DOOR IS OPENED.

BEFORE DRYING

Check care labels inside the garments

CARE LABELS YOU MAY FIND ON YOUR FABRICS

	'Tumble drying beneficial'
	'Do not tumble dry'
	'Dry flat'

Do not tumble dry woolen or wool mixture articles unless the article is labeled to be suitable due to possibility of shrinkage.

Place delicate articles, e.g. tights and scarves, inside a pillowcase.

Sort out the clothes into groups of similar fabrics and colours.

Check the care label inside the garment.

We suggest that a fabric conditioner be used to reduce static electricity.

Delicate articles e.g. tights should be placed inside a pillowcase.

It is better to dry small and large articles together.

Do not dry unwashed items in the tumble dryer.

Remove all objects from pockets such as lighters and matches.

To avoid the need to iron easy care polyester/cotton items it is better to only dry small loads (i.e. half fill the drum).

It is better to dry small and large articles together.

Do not overload the dryer or dry large bulky items such as duvets or sleeping bags as it is important that the air flow through the dryer is not obstructed.

RUNNING THE MACHINE

Open the door.

Load clothes loosely into the drum.

Load sheets first starting with one corner.

Close the door.

Dry your hands

Switch on the machine at the socket.

Select correct heat position (See programme chart on fascia panel).

Set the programme to the required dryness setting (See programme chart on fascia panel).

Press the start button.

The drum will rotate in anticlockwise direction for a short period of time.

The drum will then begin to rotate clockwise and will stop automatically when your clothes are dry. The drum will stop and rotate anti-clockwise every few minutes to reduce creasing.

There is an automatic 12-minutes cool down period at the end of every cycle, during which the heater is switched off. This is to help minimize creasing.

After each of the programmes, the machine goes into anti-crease. This feature rotates the drum for briefly every 6 minutes until the dryer is stopped or the door is opened.

NOTE: NEVER SWITCH THE DRYER OFF AND LEAVE A HOT LOAD IN THE DRUM – RISK OF FIRE.

When drying large items such as sheets, we suggest you periodically stop the dryer to redistribute the load. To stop the machine during a programme, simply open the door, the drum will stop rotating automatically and restart when you close the door. Press the start button to restart the machine.

WARNING: Never stop a tumble dryer before the end of a drying cycle unless all items are quickly removed and spread out so that heat is dissipated.

AFTER REMOVING THE DRIED CLOTHES: ALWAYS CLEAN THE FILTER.

Failure to clean the filter will extend drying times and cause the safety cut-out to operate.

Pull the filter upwards and away from the appliance.

Remove threads or fluff by hand or with a soft brush.

Slide the filter back.

Wash the filter occasionally in detergent solution and with a soft brush to remove small particles.

TO AVOID MINOR FAULTS

If the clothes are not dry after normal drying time:

Check that you used the correct heater setting.

Check the fuse in the moulded plug.


Check that the lint filter has been cleaned. A blocked filter will restrict the airflow.

Check that your dryer is heating – the right side below the door should feel warm after the first 10 – 15 minutes of its programme. Failure to heat may indicate the safety cut-out has operated. To reset, simply press the red button at the rear of the machine. If operated, a sharp click will be heard. This cut-out only operates if the air flow is severely restricted so make sure the filter is clean, the air inlets and outlets at the front and back are not blocked, and that all other restrictions are removed before re-starting. If the cut-out continues to operate after checking the above points, you should contact your service agent.

Your dryer is designed to operate in a room temperature range of 5°C to 30° C.


DOOR REVERSAL APPLIANCE DOOR

The door on the dryer can be positioned either with the left or right hand hanging. Please follow illustrations below to change the door position.

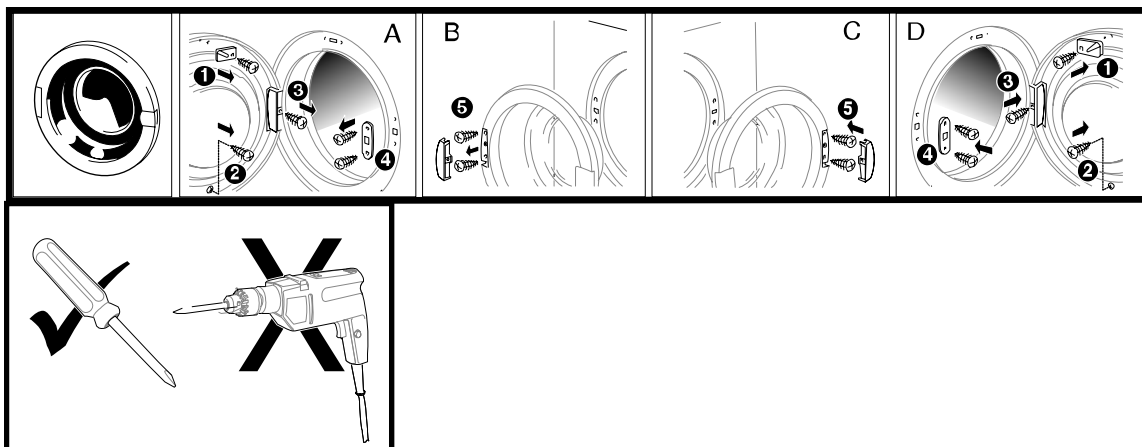

THE DECOR DOOR

The hinges can be fastened through the pre-drilled holes on either the left or right hand with the door stops being fitted on the other side.

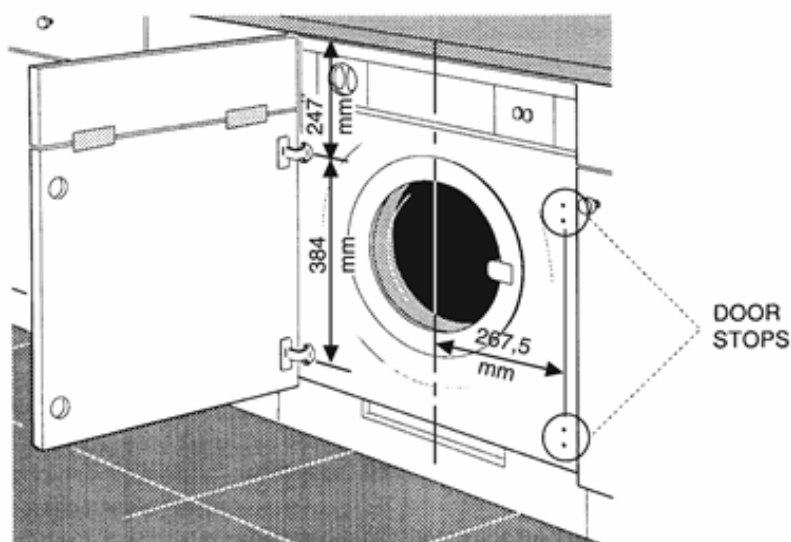

TECHNICAL DATA

Overall dimensions : height 86.5 – 89cm width 59.5cm depth 53cm

Maximum dry weight of cotton, linen 6.0kg synthetics 2.0kg.

For electrical ratings see plate on rear of machine.

Fuse rating: 13amp.

DON'TS.

Do not – Overload the dryer.

Do not – Dry articles singly as they tend to roll up and so increase drying time.

Do not – Dry woolen or wool mixture articles unless the article is labeled as suitable. This should avoid shrinkage.

Do not – Allow venting hose (where applicable) or filter to become blocked.


Do not – Allow fluff to accumulate around the tumble dryer.

NEVER SWITCH THE DRYER OFF AND LEAVE A HOT LOAD IN THE DRUM – RISK OF FIRE.

ANY PROBLEMS


If the clothes are not dry after normal drying time:

- Check that the filter is clean.
- Check that you used the correct heat setting.
- Check that the venting hose is not blocked (sometimes a strong wind may cause a back pressure).
- Check that you have not set the timer within a cool down period.

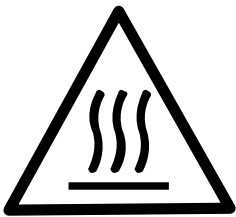

**CAUTION
HOT SURFACE**

This label positioned on the rear of your dryer, indicates the surface is hot when in operation – avoid touching.

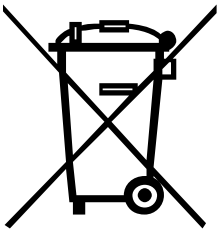

This appliance is marked according to the European Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). This guideline is the frame of a European wide validity of return and Recycling on Waste Electrical and Electronic Equipment.



